








PUNJAČI I STARTERI



BM BOŽIĆ DOO
Tošin Bunar 164/8
Novi Beograd
www.bmbozic.com

011/2609-722
011/2608-144
011/2608-145

| Šifra BM BOŽIĆ | | Naziv artikla |
|----------------|---|---------------|
| 303500 |  | PUNJAČ 12A |
| 310000 |  | PUNJAČ 16A |
| 318500 |  | PUNJAČ 30A |
| 318900 |  | PUNJAČ 50A |

| | | |
|---------------|---|--|
| <p>301700</p> |  | <p>PUNJAČ MACH 114 12V</p> |
| <p>302700</p> |  | <p>PUNJAČ MACH 116 12V</p> |
| <p>303200</p> |  | <p>PUNJAČ MACH 119 12V</p> |
| <p>300300</p> |  | <p>PUNJAČ MATIC 116 12V</p> |
| <p>300500</p> |  | <p>PUNJAČ MATIC 119 12V</p> |
| <p>340600</p> |  | <p>PUNJAČ- STARTER 150A</p> |
| <p>341000</p> |  | <p>PUNJAČ- STARTER 220A</p> |

| | | |
|----------------------|---|--|
| <p>343100</p> |  | <p>PUNJAČ- STARTER 300A</p> |
| <p>354100</p> |  | <p>PUNJAČ- STARTER 400A</p> |
| <p>354200</p> |  | <p>PUNJAČ- STARTER 410A</p> |
| <p>363400</p> |  | <p>PUNJAČ- STARTER 4500</p> |
| <p>363500</p> |  | <p>PUNJAČ- STARTER 5000</p> |